


**TSM4 Remote Speaker Microphone
User Guide
T03-00045-PCAA/PCEA**

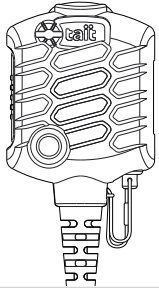

Important Safety Information



Please read this guide carefully before you use the TSM4. Please also see the Safety and Compliance booklet (MTA-00011-xx) that shipped with your Tait radio. It explains how to use Tait devices safely.

Compatible Radios

Make sure you only use the TSM4 with these Tait radio models:

- TP9400 / 9600 / 9800
- TP9300 / 9500 / 9700
- TP3000



The TSM4 is NOT compatible with Tait Intrinsically Safe (IS) radio models.

Compatible Radio Firmware


To use the front function button, you need:

Radio Series	Firmware	Programming Application
TP9400 TP9600 TP9800	P25 v2.22 / later	P25 (XPA) v2.22.1.283 / later
TP9300 TP9500 TP9700	DMR v2.30 / later	DMR (XPA) v2.30.1.2 / later
TP3000	v3.00.20 / later	v2.00.08 / later




Contact your Tait dealer if you need to update your radio firmware or programming application.


Key Features

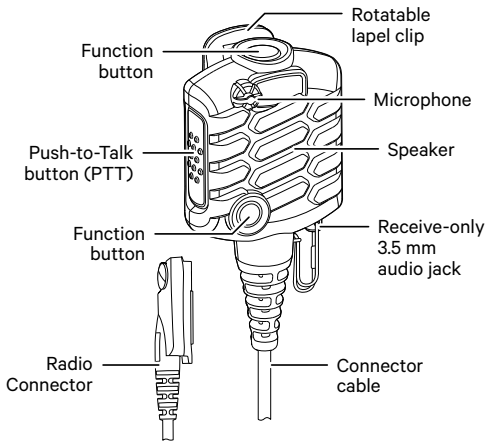


Connect to a Radio

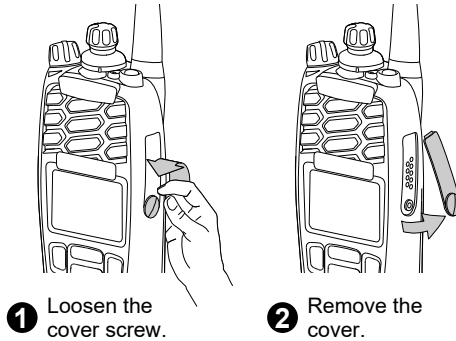


Connecting the TSM4 to the radio disables the radio speaker.

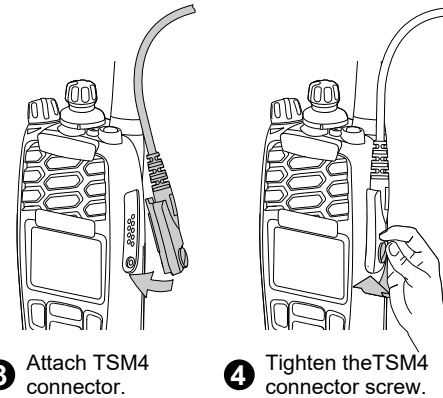

Recommended Wearing Position

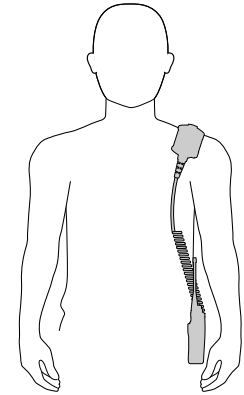

Transmit audio from the TSM4

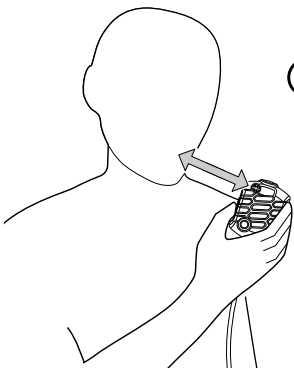

Hold the TSM4 5-10 cm (2-4 in) from your mouth.

1. Press and hold the PTT button.
2. Talk into the microphone.

Receive audio on the TSM4



To adjust the volume to a comfortable level, turn the volume control knob on the radio.




Listening at high volume can damage your hearing.

Compatible Earpieces


Type of earpiece	Jack	Part Number
In-ear	Right-angled	T03-00086-0101
	Straight	T03-00086-0102
C-hook	Right-angled	T03-00086-0201
	Straight	T03-00086-0202
D-ring	Right-angled	T03-00086-0301
	Straight	T03-00086-0302




Contact your Tait dealer for other earpiece options.

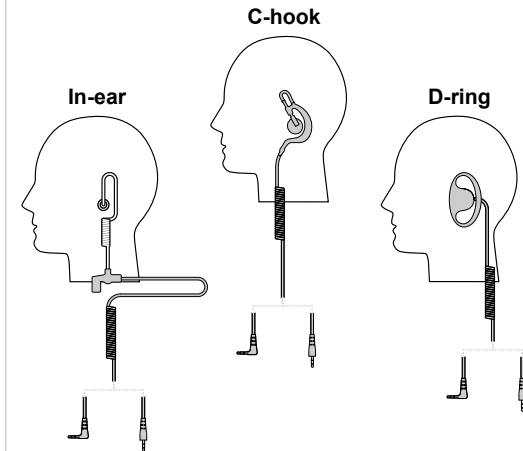

Using an earpiece

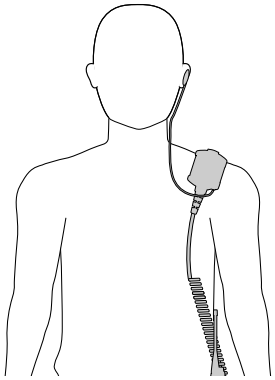


i Connecting an earpiece will mute the TSM4 speaker.

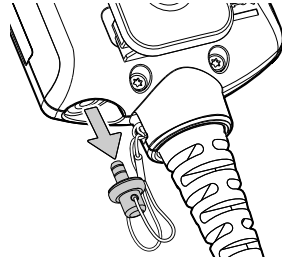

1 Remove the connector bung.


! Make sure you turn down the volume before you attach an earpiece.

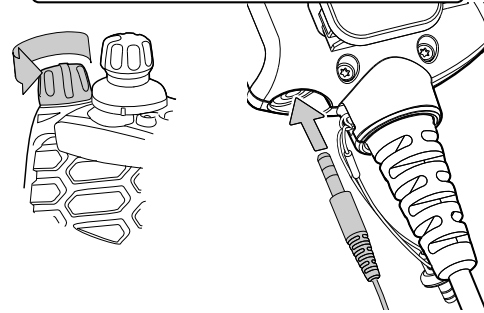

2 Turn the volume down.

3 Plug the earpiece accessory cable into the audio connector jack.

i When you are not using an earpiece keep the 3.5 mm connector bung inserted into the audio jack.

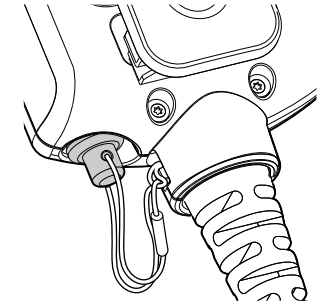


Replaceable Parts

Spares Kit Part	Part Number
1 Lapel clip (with screws)	T03-00053-0202
2 Coil cable standard *	T03-00053-0203
3 Coil cable short **	T03-00053-0207
4 Rubber bung (x5)	T03-00053-0204


* Length range 55-150 cm (21-59 in)

** Length range 30-100 cm (12-39 in)


! Make sure a qualified technician services the TSM4. Within the warranty period, a Tait dealer must do this.

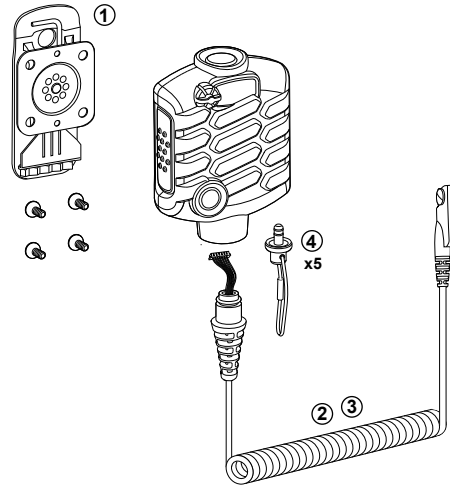

Cleaning Procedures

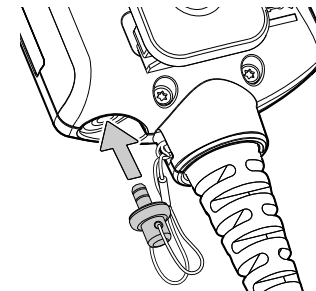

1 Seal the 3.5 mm earpiece connector with the bung.

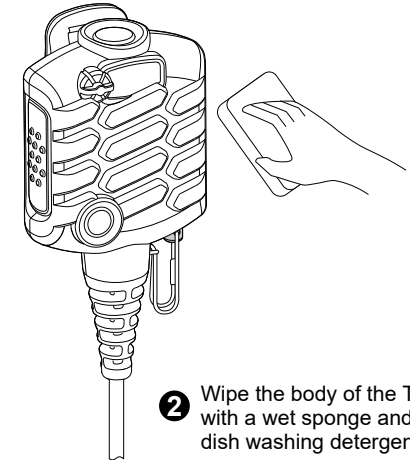

2 Wipe the body of the TSM4 with a wet sponge and diluted dish washing detergent.

